



770.991.9299
 customercare@alarmassociates.net
 3605 Flat Shoals Road
 Atlanta, GA 30349

Honeywell LYNX Plus L3000
Burglar Alarm Instructions

Please see manufacturer's published guide for complete instructions.

IMPORTANT NOTE: A rapidly beeping keypad upon entering your home or business will indicate that an alarm has occurred during your absence and an intruder may still be there as the siren sounds for only four minutes. LEAVE IMMEDIATELY and contact the police from a nearby safe location.

To cancel a false alarm, call Central Station at 770.934.1120 and provide a valid verbal password.

Please ensure that everyone understands how to Disarm and Arm the alarm system, understands which doors are assigned to have an entry & exit delay, understands the difference between "Stay", "Away", "Instant" modes, and understands how to cancel a dispatch in the event of an accidental alarm so as not to waste emergency responder resources and avoid potential fines. We cannot provide you with 4-digit codes or verbal passwords... if you forget them they can be reset by request in writing with signature.

TO:	KEYPAD ACTION:	INFORMATION:
SYSTEM STATUS	<div style="border: 1px solid black; width: 40px; height: 40px; margin: 0 auto; display: flex; align-items: center; justify-content: center;">*</div> STATUS	When pressed prior to arming, the keypad will display all open zones, and will announce system status.
DISARM (turn OFF)	4-digit CODE + <div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">OFF</div>	Enter only through doors having an assigned Entry Delay (using any other door will trip the Alarm). The keypad will beep to indicate the system must be acknowledged within the allotted timeframe to disarm the burglar alarm.
SILENCE "TROUBLE" OR "ALARM" CONDITIONS & RESET	4-digit CODE + <div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">OFF</div>	<p>Silences signaling devices that are in "ALARM" or "TROUBLE" conditions. For "TROUBLE" conditions, call 770.991.9299 to schedule service.</p> <p>AFTER silencing the condition, read the display to determine the trouble or alarm. <u>Perform this a 2nd time</u> to RESET the alarm system, clearing alarm memory, allowing user to arm the alarm.</p> <ul style="list-style-type: none"> • "Low Bat" WITHOUT zone number or description = System Low Battery. • "Low Bat" WITH zone description = associated device Low Battery. • "No AC" = Power Loss to Alarm System
ARM – "Away" (turn ON) (entry & exit delay will be active only on assigned doors, motion detectors will be ON)	press & hold <div style="border: 1px solid black; width: 60px; height: 40px; display: flex; align-items: center; justify-content: center;">AWAY</div>	The <u>green</u> "Ready" light must be steady illuminated (NOT flashing). Press and hold the appropriate key (the keypad will start beeping for the AWAY mode to indicate the system will turn on within the allotted timeframe to exit). Once armed, the <u>red</u> "Armed" light will illuminate.
ARM – "Stay" (turn ON) (entry & exit delay will be active only on assigned doors, motion detectors will be OFF)	press & hold <div style="border: 1px solid black; width: 60px; height: 40px; display: flex; align-items: center; justify-content: center;">STAY</div>	
ARM – "Instant" (turn ON) (exit delay will be active on only on assigned doors, however there is NO entry delay, motion detectors will be OFF)	press & hold <div style="border: 1px solid black; width: 60px; height: 40px; display: flex; align-items: center; justify-content: center;">STAY + 0</div> NO DELAY	If "Ready" light is flashing & not illuminated, check SYSTEM STATUS.
CHIME MODE (ON or OFF)	<div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">#</div> + <div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">9</div> FUNCTION CHIME	The Chime Mode allows you to hear whenever a door (not programmed as an "interior door") or window is opened and closed.
MUTE System Announcements	<div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">#</div> + <div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">2</div> + <div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">OFF</div> FUNCTION VOLUME ESCAPE	When muted, no system announcements will be made, but chimes will still be made if Chime Mode is activated.
ADJUST VOLUME OR UNMUTE System Announcements	<div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">#</div> + <div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">2</div> + <div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">3 ↑</div> OR <div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">6 ↓</div> FUNCTION VOLUME	To adjust System Announcements, 3 will increase the volume one level and 6 will decrease the volume one level.
ZONE BYPASS ALWAYS bypass zones that would create trouble conditions if activated when alarm is disarmed (Wireless Device before battery replacement, AC Tamper Sensor before servicing condenser, etc.).	4-digit CODE + <div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center;">6</div> + 2-digit ZONE BYPASS	<p>Disables an alarm zone before arming the alarm. Disarming the alarm disables the bypass.</p> <p>Open a window/door and press the Star/Asterisk key to see the zone number for the bypass).</p>