



**770.991.9299**  
 customercare@alarmassociates.net  
 3605 Flat Shoals Road  
 Atlanta, GA 30349

**Honeywell LYNX Plus L5100**  
**Burglar Alarm Instructions**

Please see manufacturer's published guide for complete instructions.

**IMPORTANT NOTE:** A rapidly beeping keypad upon entering your home or business will indicate that an alarm has occurred during your absence and an intruder may still be there as the siren sounds for only four minutes. LEAVE IMMEDIATELY and contact the police from a nearby safe location.

**To cancel a false alarm, call Central Station at 770.934.1120 and provide a valid verbal password.**

Please ensure that everyone understands how to Disarm and Arm the alarm system, understands which doors are assigned to have an entry & exit delay, understands the difference between "Stay", "Away", "Instant" modes, and understands how to cancel a dispatch in the event of an accidental alarm so as not to waste emergency responder resources and avoid potential fines. We cannot provide you with 4-digit codes or verbal passwords... if you forget them they can be reset by request in writing with signature.

| Navigate by lightly touching the screen. Press the Home Button (bottom right push-button) to go to the Home Screen.  |  |   |   |            |             |                 |               |
|--|--|---|---|------------|-------------|-----------------|---------------|
| TO:  |  | ACTION:   |   | Exit Delay | Entry Delay | Perimeter Armed | Motions Armed |
| RESIDENTIAL USE ONLY   | <b>ARM – "Stay" (turn ON)</b><br>(entry & exit delay will be active only on assigned doors, motion detectors will be OFF)            |   | touch <b>Arm Stay</b> + 4-digit CODE  | Yes        | Yes         | Yes             | No            |
|  | <b>ARM – "Instant" (turn ON)</b><br>(exit delay will be active only on assigned doors, NO entry delay, motion detectors will be OFF) |   | touch <b>Delay - then - Arm Stay</b> + 4-digit CODE   | Yes        | No          | Yes             | No            |
|  | <b>ARM – "Away" (turn ON)</b><br>(entry & exit delay will be active only on assigned doors, motion detectors will be ON)             |   | touch <b>Arm Away</b> + 4-digit CODE  | Yes        | Yes         | Yes             | Yes           |
| <b>DISARM (turn OFF)</b>   |  | touch <b>Disarm</b> + 4-digit CODE  | Enter only through doors having an assigned Entry Delay (using any other door will trip the Alarm). The keypad will start beeping to indicate the system must be acknowledged within the allotted timeframe to disarm the burglar alarm.  |            |             |                 |               |
| <b>SYSTEM STATUS</b><br>(if green "Ready" light is flashing or not steady illuminated)   |  | touch <b>More</b> + touch <b>System</b>   | When pressed prior to arming, the keypad will display all open zones, and will announce system status.  |            |             |                 |               |
| <b>SILENCE "TROUBLE" OR "ALARM" CONDITIONS &amp; RESET</b>   |  | touch <b>Disarm</b> + 4-digit CODE  | Silences "ALARM" or "TROUBLE" conditions. For "TROUBLE" conditions, call us at 770-991-9299.<br>After silencing the condition, read the display to determine the trouble or alarm. Perform this a 2nd time to RESET the alarm system, clearing the memory on the display, allowing the alarm to be armed again.<br>If a WIRELESS Smoke Detector –or- Carbon Monoxide (CO) Detector low battery condition is detected, the keypad will beep and display the Detector's Zone Number. In addition, the Detector's LED will blink every 45 seconds. This condition will last for 7 days, and then the detector will "chirp" every 45 seconds. Pressing the Detector's test button will silence the "chirp" for 12 hours. The battery should be replaced upon Keypad notification (BEFORE the Detector begins to chirp). |            |             |                 |               |
| <b>CHIME / VOICE / VOLUME CONTROL</b><br>system must be disarmed to use some of these commands   |  | touch <b>Settings</b> + touch <b>Chime and/or Voice</b> + touch <b>Save</b>   | The Chime & Voice is audible indicator when a door (not programmed as an "interior door") or window is opened. Before saving the settings, volume can be adjusted by sliding from left (decrease) to right (increase).  |            |             |                 |               |
| <b>TESTING THE SYSTEM</b><br>system must be disarmed and Master Code must be used (no other user code will work)<br><br><i>See manufacturer's published guide for cleaning touch screen.</i>   |  | touch <b>Tools</b> + 4-digit <b>MASTER CODE</b> + touch <b>Test</b> + touch <b>Walk Test</b>  | The control sounds a single beep about every 30 seconds while in test mode, as the system will not send signals to Central Station during this time.<br><br>Open each protected door/window and walk in front of any motion detectors and listen for three acknowledgement beeps for each zone. Note, WIRELESS motion detectors only activates every 3 minutes to conserve battery life. Smoke Detectors & CO Detectors require specialized equipment for testing, call to schedule service.<br><br>After all zones have been tested successfully and closed, there should be no zone numbers displayed on the keypad (call for service as needed). Disarm the system to end the test.  |            |             |                 |               |
| <b>ZONE BYPASS</b><br><ul style="list-style-type: none"> <li>Always bypass zone before changing batteries.</li> <li>Panic, Fire and CO zones cannot be bypassed.</li> <li>System must be disarmed to bypass zones.</li> <li>Bypassed zones are disabled &amp; unprotected.</li> <li>Disarming the alarm removes all bypasses.</li> </ul> |  | touch <b>Zones</b> + touch to select the zone(s) to bypass. Use the "▼" or "▲" to see all zones OR touch <b>Bypass All Faulted</b> + 4-digit CODE | Before using "Bypass All Faulted" (for all open zones), make sure that only those zones that you wish to leave unprotected are open, and no others have been unintentionally left open.   |            |             |                 |               |

For portable/personal panic buttons, press & hold for 2 seconds – for Console Panic, press and hold for 4 seconds for touch Panic icon(s) to appear.