



770.991.9299
 customercare@alarmassociates.net
 3605 Flat Shoals Road
 Atlanta, GA 30349

Honeywell Vista-Series
Burglar Alarm Instructions
 for Push-Button keypad and Touch Keypad "Console Mode"
 Please see manufacturer's published guide for complete instructions.

IMPORTANT NOTE: A rapidly beeping keypad upon entering your home or business will indicate that an alarm has occurred during your absence and an intruder may still be there as the siren sounds for only four minutes. LEAVE IMMEDIATELY and contact the police from a nearby safe location.

To cancel a false alarm, call Central Station at 770.934.1120 and provide a valid verbal password.

Please ensure that everyone understands how to Disarm and Arm the alarm system, understands which doors are assigned to have an entry & exit delay, understands the difference between "Stay", "Away", "Instant" modes, and understands how to cancel a dispatch in the event of an accidental alarm so as not to waste emergency responder resources and avoid potential fines. We cannot provide you with 4-digit codes or verbal passwords... if you forget them they can be reset by request in writing with signature.

TO:		KEYPAD ACTION:	Exit Delay	Entry Delay	Perimeter Armed	Motions Armed				
RESIDENTIAL USE ONLY	ARM – "Stay" (turn ON) (entry & exit delay will be active only on assigned doors, motion detectors will be OFF)	4-digit CODE + <table border="1"><tr><td>3</td></tr><tr><td>STAY</td></tr></table>	3	STAY	Yes	Yes	Yes	No	The green "READY" light must be illuminated to be able to Arm the alarm. Upon entering a valid 4-digit keypad code + command... the keypad will start beeping to remind you to leave if arming in the "Away" mode, as motion detector(s) will turn on in this mode. Once armed, the red "ARMED" light will illuminate.	
	3									
STAY										
ARM – "Instant" (turn ON) (exit delay will be active only on assigned doors, NO entry delay, motion detectors will be OFF)	4-digit CODE + <table border="1"><tr><td>7</td></tr><tr><td>INSTANT</td></tr></table>	7	INSTANT	Yes	No	Yes	No			
7										
INSTANT										
Prox Tags only Disarm -or- Arm "Away"	ARM – "Away" (turn ON) (entry & exit delay will be active only on assigned doors, motion detectors will be ON)	4-digit CODE + <table border="1"><tr><td>2</td></tr><tr><td>AWAY</td></tr></table>	2	AWAY	Yes	Yes	Yes	Yes	If the green "READY" light will not illuminate, check for faulted or open zones by pressing the star/asterisk key.	
	2									
AWAY										
DISARM (turn OFF)	4-digit CODE + <table border="1"><tr><td>1</td></tr><tr><td>OFF</td></tr></table>	1	OFF	Enter <u>only through doors having an assigned Entry Delay</u> (using any other door will trip the Alarm). The keypad will start beeping to indicate the system must be acknowledged within the allotted timeframe to disarm the burglar alarm.						
1										
OFF										
CHECK FOR FAULTED (OPEN) ZONES (if green "Ready" light is NOT on)		<table border="1"><tr><td>*</td></tr></table>	*	Each time the star/asterisk button is pressed, the display will scroll through each zone that is faulted or open... such as a door or window is open, movement in motion detector(s) field of view, etc.						
*										
SILENCE "TROUBLE" OR "ALARM" CONDITIONS & RESET		4-digit CODE + <table border="1"><tr><td>1</td></tr><tr><td>OFF</td></tr></table>	1	OFF	Silences "ALARM" or "TROUBLE" conditions. For "TROUBLE" conditions, call us at 770-991-9299. After silencing the condition, read the display to determine the trouble or alarm. Perform this a 2nd time to RESET the alarm system, clearing the memory on the display, allowing the alarm to be armed again. If a WIRELESS Smoke Detector –or- Carbon Monoxide (CO) Detector low battery condition is detected, the keypad will beep and display the Detector's Zone Number. In addition, the Detector's LED will blink every 45 seconds. This condition will last for 7 days, and then the detector will "chirp" every 45 seconds. Pressing the Detector's test button will silence the "chirp" for 12 hours. The battery should be replaced upon Keypad notification (BEFORE the Detector begins to chirp).					
1										
OFF										
CHIME MODE (ON or OFF)		4-digit CODE + <table border="1"><tr><td>9</td></tr><tr><td>CHIME</td></tr></table>	9	CHIME	The Chime Mode allows you to hear whenever a perimeter zone (not programmed as an "interior door") is opened.					
9										
CHIME										
ZONE BYPASS <ul style="list-style-type: none"> Always bypass zone before changing batteries. Panic, Fire and CO zones cannot be bypassed. System must be disarmed to bypass zones. Bypassed zones are disabled & unprotected. Disarming the alarm removes all bypasses. 		4-digit CODE + <table border="1"><tr><td>6</td></tr><tr><td>BYPASS</td></tr></table>	6	BYPASS	+ 2-digit -or- 3-digit Zone Number for specific zone		-or- instead of entering the zone number	<table border="1"><tr><td>#</td></tr></table>	#	This function bypasses all faulted (open) zones. Make sure that only those zones that you wish to leave unprotected are open, and no others have been unintentionally left open (feature not available for all systems).
6										
BYPASS										
#										
TESTING THE SYSTEM Testing should be done weekly to ensure proper operation.		4-digit Master CODE + <table border="1"><tr><td>5</td></tr><tr><td>TEST</td></tr></table>	5	TEST	+ <table border="1"><tr><td>0</td></tr></table>		0	Perform the Test while system is Disarmed. The keypad sounds a single beep about every 30 seconds while in test mode, as the system will not send signals to Central Station during this time. The siren should activate for about 1 second, and the keypad will display "Test in Progress". Open each protected door/window and walk in front of any motion detectors and listen for three acknowledgement beeps for each zone. Note, WIRELESS motion detectors only activates every 3 minutes to conserve battery life. Smoke Detectors & CO Detectors require specialized equipment for testing, call to schedule service. After all zones have been tested successfully and closed, there should be no zone numbers displayed on the keypad (call for service as needed). Disarm the system to end the test.		
5										
TEST										
0										

To activate portable/personal panic buttons –or- push-button style keypad Function Buttons (if programmed), press and hold for 2 to 4 seconds.

GSM wireless (cellular) communications monitoring allows up to 10 Alarm/Trouble/Supervisory signals per month (unless subscribing for high usage). If you exceed this allowance, you may be subject to overage charges. Ensure each user knows how to properly use the system to reduce False Alarms, ALWAYS bypass zones that would create Trouble conditions even when alarm is disarmed (wireless devices during battery replacement, Air Conditioner tamper sensors before servicing the Air Conditioner, moving item with attached asset protection sensor, etc.) and do NOT ignore low battery conditions.